




3 STEPS FOR HOLLOWING

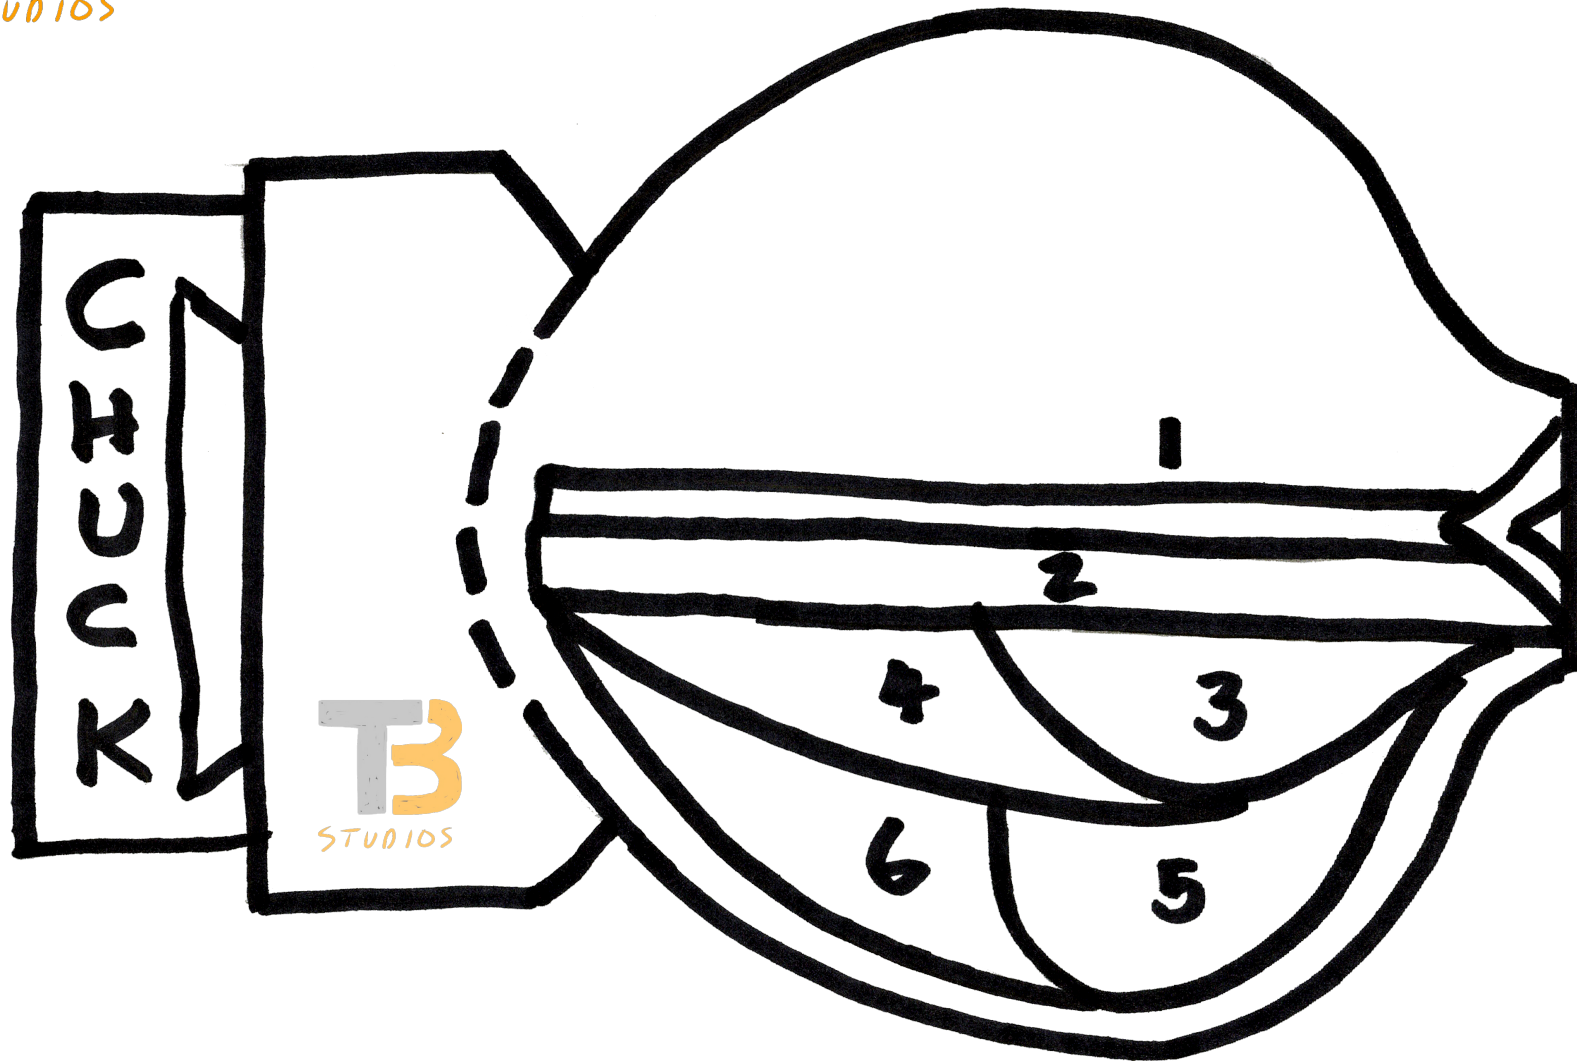

STEP 1: BORE A HOLE TO DEPTH

STEP 2-4: START OPENING UP THE FORM WITH A STRAIGHT HOLLOWING TOOL

STEP 5-6: DEFINE FINAL WALL THICKNESS WITH A BENT HOLLOWING TOOL